



A & F WOOD PRODUCTS, INC.


5665 Sterling Drive Howell, MI 48843

Phone: 517.545.5811 Fax: 517.545.5633 Toll Free: 800.367.3293

www.afwood.com

Converging Door Kit/Mullion Connector Instructions

For Joining two #1750 Buil-Up Pockets or
two #2000 Series K.D. Pocket Door Frames

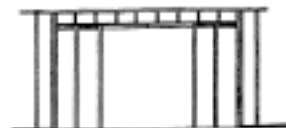

Step 1:


Prepare Rough Opening:

- Built-Up: $4 \times \text{Door} + 2''$

Sample: $30'' \text{ Door} \times 4 + 2'' = 122''$

- K.D.: $4 \times \text{Door} + 1/4''$

Sample: $30'' \text{ Door} \times 4 + 1/4'' = 120 \ 1/4''$



Step 2:

- Built-Up: Cut $3/4''$ off opening end of header assembly, cut ends square to keep header straight.

- K.D.: Cut $1''$ off opening end of header assembly, cut ends square to keep header straight.

KD 1"





Built-Up
 $3/4''$




Step 3:

Butt cut ends together and fasten using brackets in this kit as illustrated. Drill $1/4''$ holes for the 2 machine bolts and one in the center for lag screw.

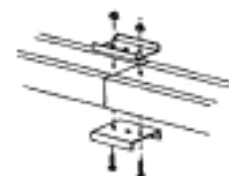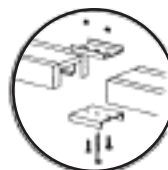

Step 4:

Hang combined assembly and fasten to rough header with center lag screw. Adjust to level.

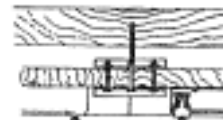

Step 5:

Install center stop bumper into ends of track.
Final adjust after doors are in place.



Step 6:

Continue to install doors per instructions with Pocket door Frame.