



A & F WOOD PRODUCTS, INC.

5665 Sterling Drive Howell, MI 48843
 Phone: 517.545.5811 Fax: 517.545.5633 Toll Free: 800.367.3293
 www.afwood.com


Jamb Kit Instructions

Fits all Built-Up and K.D. Pocket Door Frames

#1755 Clear Pine Jamb Kit

#1756 Paint Grade Pine Jamb Kit

Pre-sanded jamb kits are available in stain or paint grade pine. Simply, cut to length and install. Jamb kits fit all standard 2x4 wall applications with 6'8" doors.

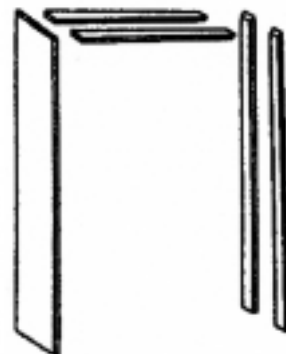

Installation Instructions:


1. Install Pocket Door Frame according to instructions. Once drywall is installed around unit, measure height "A" (from floor to bottom of frame header).



2. Open door fully so door is extended into opening. Cut split jambs to "B". Fasten to front edge of frame. Maintain minimum 3/16" clearance on both sides of door. Raise or lower hanger to plumb door with split jambs.



3. Shim and plumb strike jamb (wide piece) with door.

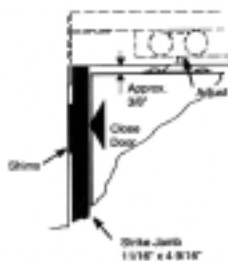


4. Cut split headers to "C".

Determine side of hangers with lock arm and fasten this header with screws for easy removal. Nail other side. Maintain 3/16" on each side of door.



5. Fasten bottom door guides so door stays in center of pocket and travels easily without bindings.

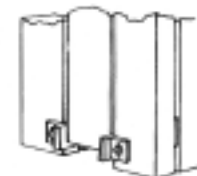

6. Finish with your choice of casings (not included).

