



A & F WOOD PRODUCTS, INC.

5665 Sterling Drive Howell, MI 48843

Phone: 517.545.5811 Fax: 517.545.5633 Toll Free: 800.367.3293

www.afwood.com

Extention Kit #752, #753 & #754 Instructions K.D. Pocket Door Frames Fits all K.D. Pocket Door Frames

Installation Instructions

Step 1:

Prepare Rough Opening (Special Dimensions)

Nominal Door


Size	Equation	A	R.O.
7'0"	Door + 4 1/2"		= 88 1/2"
8'0"	Door + 4 1/2"		= 100 1/2"
9'0"	Door + 4 1/2"		= 112 1/2"



Step 2:

Prepare Split Members:

Push wood filler out of steel split member 8".
(Split members supplied in pocket door frame.)
Cut wood off flush with steel.
(Repeat on remaining split members.
Four per pocket.)

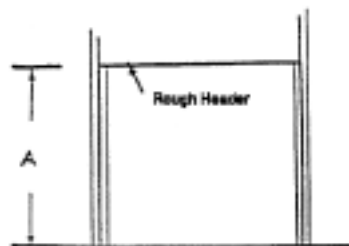

Step 3:

Install Extenders:

At opposite end of cut, insert extenders.

Step 4:

Continue with pocket frame installation Instructions.

