


JAMB KIT INSTRUCTIONS

Fits all Built-Up & K.D. Pocket Door Frames


#1755 Solid Pine Jamb Kit
#1756 FJ Primed Jamb Kit

Jamb Kits are available in stain grade pine or finger joint pine.
Cut to length and install. They are pre-sanded for easy finishing.

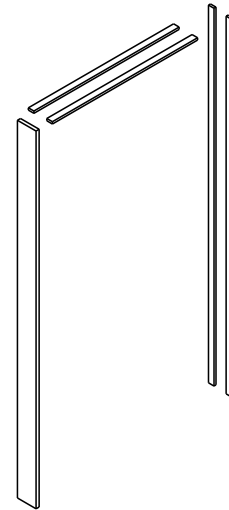


Installation Instructions


1. Install Pocket Door Frame according to instructions. Once drywall is installed around unit, measure height "A" (from floor to bottom of frame header).

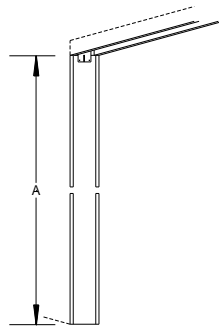


2. Open door fully so door is extended into opening. Cut split jambs to "B". Fasten to front edge of frame. Maintain minimum 3/16" clearance on both sides of door. Raise or lower hanger to plumb door with split jambs.

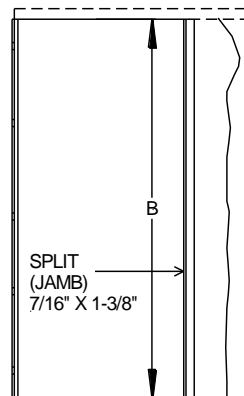


3. Shim and plumb strike jamb (wide piece) with door.

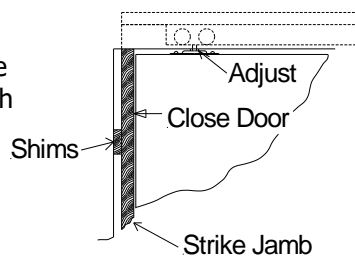

4. Cut split headers to "C". Determine side of hangers with lock arm and fasten this header with screws for easy removal. Nail other side. Maintain 3/16" on each side of door.

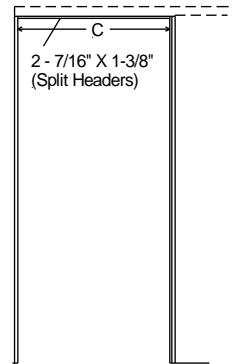

5. Fasten bottom door guides so door stays in center of pocket and travels easily without binding.

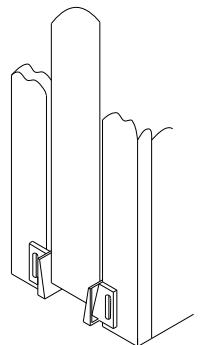

6. Finish with your choice of casings (not included).

