

A & F WOOD INC.

3333 West Grand River Howell, Mi 48855
 Phone: 517.618.7861 Fax: 517.618.7860
www.afwood.com

Extension kit #1752, & #1753 Instructions
 Built-Up Pocket Door Frames
 Fits all Built-Up Pocket Door Frames


Installation Instructions

Step 1:

Prepare Rough Opening (Special Dimensions)

Nominal Door Height

Size	Equation	R.O. (A)
7'0"	Door + 4-1/2" [11.43cm]	88-1/2" [224.79cm]
8'0"	Door + 4-1/2" [11.43cm]	100-1/2" [255.27cm]
9'0"	Door + 4-1/2" [11.43cm]	112-1/2" [285.75cm]

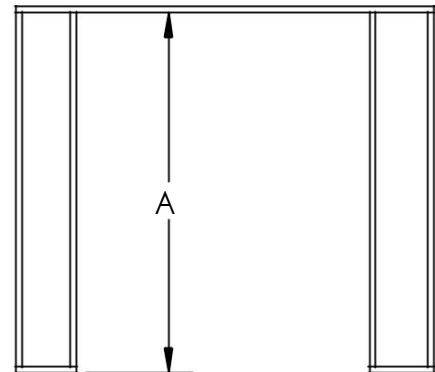

Step 2:

Install Back extension:

Slip back extension over the top of the basket back.
 Then screw into the basket on both sides with 2x #6 x 1"
 screws (Screws not included)

Step 3:

Install split jamb extension:

Slip split jamb extension on the top of the basket split jamb. Steel on top of basket will fit under 4" split jamb material. While aligning and butting wood together, screw directly into steel and wood from back side with 4 x #6 x 2" screws. (Screws not included)

Step 4:

Continue with pocket frame installation instructions.

