



# INSTRUCTIONS


## 3 WHEEL SOFT CLOSE

Minimum door width 24"(60.96cm)  
(for soft Close and Soft Open minimum door width 28"(71.12cm))

**For NEW Pocket Frame installation** - Use 3-wheel hangers and door plates included in this kit instead of standard hardware set provided with the Pocket Frame

**If upgrading and EXISTING Frame** – Remove the existing 3-wheel hanger and use the Soft Close Dampener to replace that hanger.


- 1 Install door plates 2-3/4" in from door edge

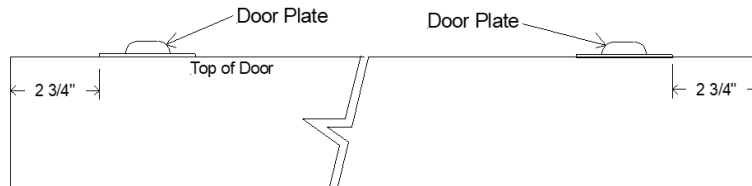

- 2 Install 3 Wheel Ball Bearing roller into track and then Install the Soft Close Dampener with the 2 IDLE Wheel end first and rotate the 3-wheel end into the track and engage the hanger to the door Plate.

(Alternate two wheels on opposite sides of track)

**NOTE:** Before putting Dampener into the track make sure the Dampener Latch is ENGAGED by pushing it towards the 3-wheel end of unit, until Engaged.

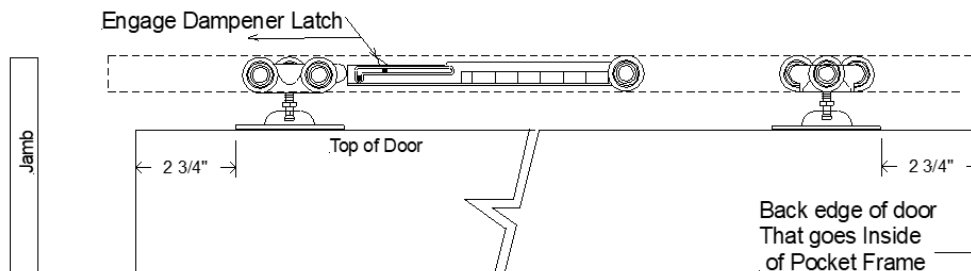

- 3 Move door, into wall of Pocket frame. (**Double Check to Make sure no track screws are interfering with the Soft close Dampener trigger**). Install the Activating arm stop into the track 2-1/4" from the jamb at the end of the track by hand. Be sure that arm is in the center of the track. Now slowly close the door to the jamb. Adjust Activating arm if needed to allow door to touch Jamb.

