



INSTRUCTIONS

KD134KIT 1-3/4" K.D. POCKET DOOR ADAPTER KIT FOR 1-3/4" THICK DOORS

UNIVERSAL ADAPTOR KIT
FOR 1-3/4" K.D. KITS
CAN ACCOMMODATE
A&F WOOD KITS AND
ACME K.D. POCKET FRAMES

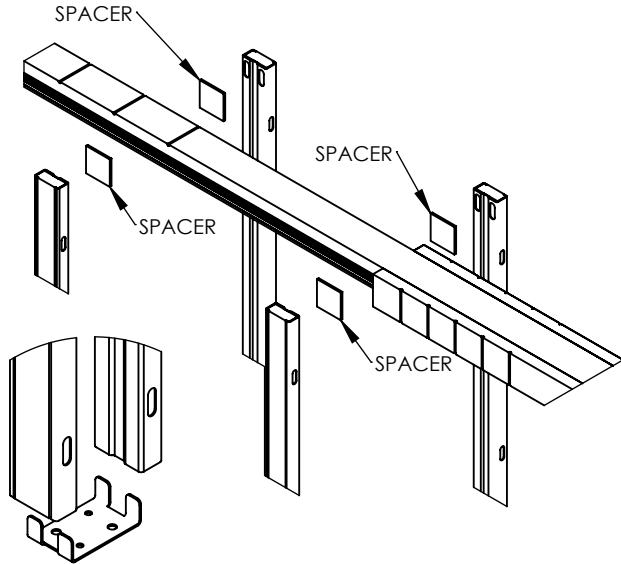

DISCARD STANDARD FLOOR PLATES
FROM POCKET FRAME KIT.
REPLACE WITH (2) NEW 1-3/4" FLOOR PLATES

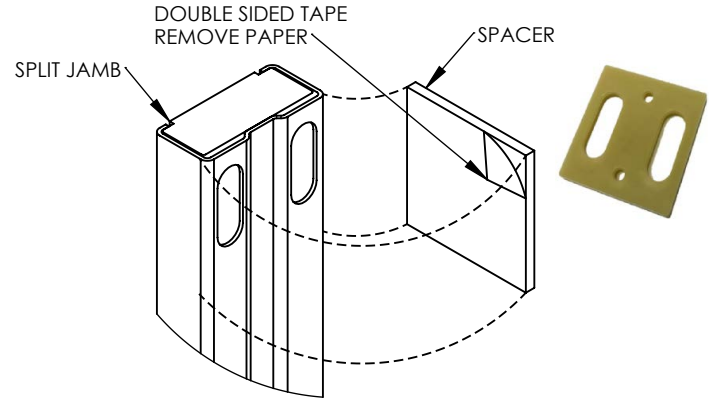

***IMPORTANT!** BEFORE ATTACHING SPLIT JAMB
PEEL PAPER OFF THE 1/8" SPACER (X4) AND STICK ONTO
THE TOP OF EACH JAMB COVERING HOLES.
THEN PROCEED FOLLOWING THE SPLIT JAMB PORTION OF
THE POCKET FRAME INSTALLATION