


**Cut down 2/4 BUILT -UP Pocket Frame to 2/2 BUILT -UP Pocket Frame**

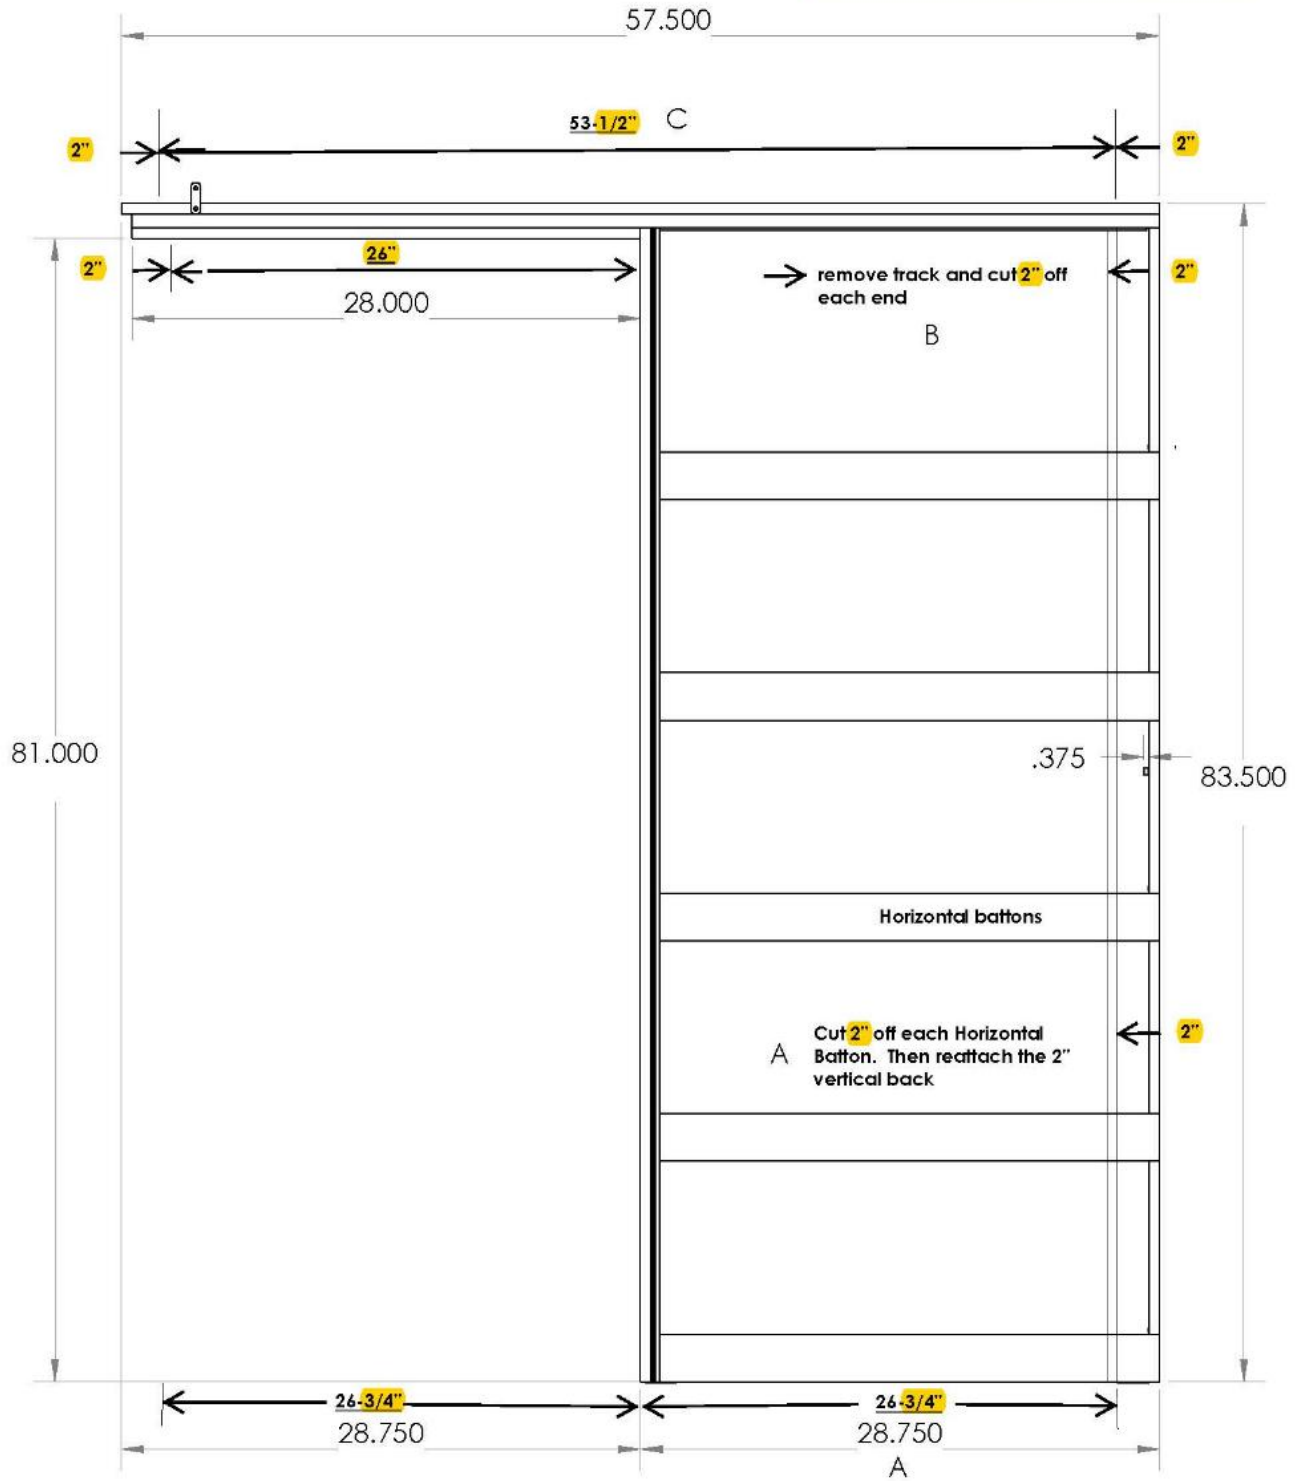

Dimension for cutting down 2468 BUILT UP POCKET DOOR FRAME to 2268 Pocket Door Frame

## **Cutting down** the width on a BUILT-UP POCKET DOOR FRAME:

Can a Built up Pocket door frame be cut down to a special size door width.....the answer is yes but with a little more work than a K.D. Frame.

**Basket:** (Example if cutting a 2/4 (28") Pocket Door Frame to fit 2/2 (26") door then cut 2" off back end of Horizontal battens)

- 1.) Cut all Horizontal battens down from back side and then re -attach the "2" Back" to basket (A)
- 2.) Re-attach floor plate on bottom batton

**Header:**

- 1.) Remove track and cut 2" off each end of the track, this way holes will align back with screw/holes (B)
- 2.) Cut off equal amount, off both ends of header. (Example if cutting a 28" Pocket Door Frame to fit 26" door, then cut 2" off both ends of Header) (C)
- 3.) Re-attach track to header

Continue to assemble Pocket door frame per the instructions